

IRONSTRIKE WOOD STOVES  
**GRANDVIEW 230**  
 LODGE COLLECTION



**GRANDVIEW 230**

**OVERVIEW**

- ◆ Thermal Fin heat exchanger creates 32% more surface area than a standard stove design resulting in more heat entering the room.

---

- ◆ Air-boost timer automatically adjusts the air intake control making startup and reloading easier.

---

- ◆ Tall opening provides an expansive view of the burning fire.

---

- ◆ Ceramic glass for extra strength and optimum heat transfer.

---

- ◆ Unique, integral air wash system keeps the glass clean and clear for a wide-open view of the fire.

---

- ◆ Precision-cut, heavy-gauge steel provides dependable, long-lasting operation.

---

- ◆ High-density firebrick retains heat longer, resulting in increased efficiency.

---

- ◆ One-touch control ensures easy operation and comfort.

---

- ◆ EPA-certified and Washington State-approved for clean and efficient operation.

---

- ◆ Limited lifetime warranty

**OPTIONS**

**LEG/PEDESTAL STYLE**

- Brushed Nickel
- Nickel
- Standard Black



Cast Olympic Leg

- Brushed Nickel
- Standard Black



Cast Coastal Leg

- Standard Black

Lakeview steel leg



Cast Coastal Leg with Ash drawer

 


Pedestal with Ash drawer




Pedestal

**LOUVER FINISH**



Brushed Nickel

 

Standard Black


**DOOR TRIM**



- Brushed Nickel
- Nickel
- Standard Black

# SPECIFICATIONS

SIDE WALL/BACK WALL Fig. 1

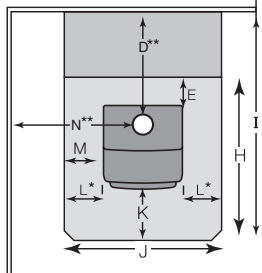


F†= Measured from corner of stove heat shield.


\*Measured from door opening.

\*\*Clearances to flue are from the stove flue collar to combustibles.

CORNER Fig. 2

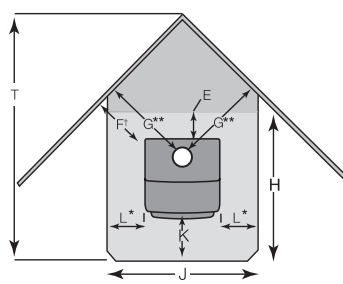

ALCOVE Fig. 3

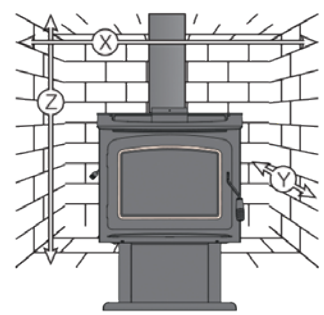

PRODUCT DIMENSIONS

		GRANDVIEW 230
Width		25-1/8"
Height:	Lakeview Legs	32-13/16"
	Coastal Legs	32-1/2"
	Olympic Legs	33-1/2"
	Pedestal	35"
Depth		26-5/8"
Stovepipe Diameter		6"

CLEARANCES

GRANDVIEW 230				
	US Single-Wall Connector	US Double-Wall Connector	Canada Single-Wall Connector	Canada Double-Wall Connector
D**= Flue Collar to Back Wall	16"	10"	16"	10"
N**= Flue Collar to Side Wall	22"	20"	22"	20"
G**= Flue Collar to Wall	16"	15"	16"	15"

HEARTH PROTECTION

E = Back of Stove	0"	0"	8"	8"
F† = Stove Corner to Wall	5-11/16"	4-11/16"	5-11/16"	4-11/16"
H = Pad Depth Minimum	38-5/8"	38-5/8"	49"	47"
I = Pad Depth to Back Wall	51"	45"	51"	45"
J = Pad Width Minimum	33"	33"	41-1/8"	41-1/8"
K = Front of Stove	16"	16"	18"	18"
L = Measured from Door Opening	8"	8"	12"	12"
M = Measured to Sides of Unit	4"	4"	8"	8"
T = Pad Depth to Corner	58-7/8"	57-1/2"	58-7/8"	57-1/2"

ALCOVES

		GRANDVIEW 230
X = Minimum Width		52"
Y = Maximum Depth		48"
Z = Minimum Height		72"

IMPORTANT NOTES:

As with any heating appliance, fireplace or stove, this appliance is extremely hot during operation. Read and understand all operating instructions before using this appliance. For further information, consult your dealer. Actual performance may vary depending upon home design and insulation, ceiling heights, climate, condition and type of wood used, appliance location, burn rate, accessories chosen, chimney installation and how the appliance is operated. Grandview 230 approved for mobile home use. Diagrams, illustrations and photographs are not to scale—consult installation instructions. Product designs, materials, dimensions, specifications, colors and prices are subject to change or discontinuance without notice.

F†= Measured from corner of stove heat shield.

\*Square-foot heating capacities and burn times are approximations only. Actual performance may vary depending upon home design and insulation, ceiling heights, climate, condition and type of wood used, appliance location, burn rate, accessories chosen, chimney installation and how the appliance is operated.

\*\*Clearances to flue are from the stove flue collar to combustibles. \*\*\*Depending on the type of wood being burned and the amount of heat required.



Visit us online  
IronStrike.us.com

